



① Measure Window - Add 4" to top and 2" to bottom. Add 2½" to each side for width. (½" for seam)

② Cut face and lining fabric the same.

③ Buy thin cording and either iron-on tape with rings or individual rings (to sew on).

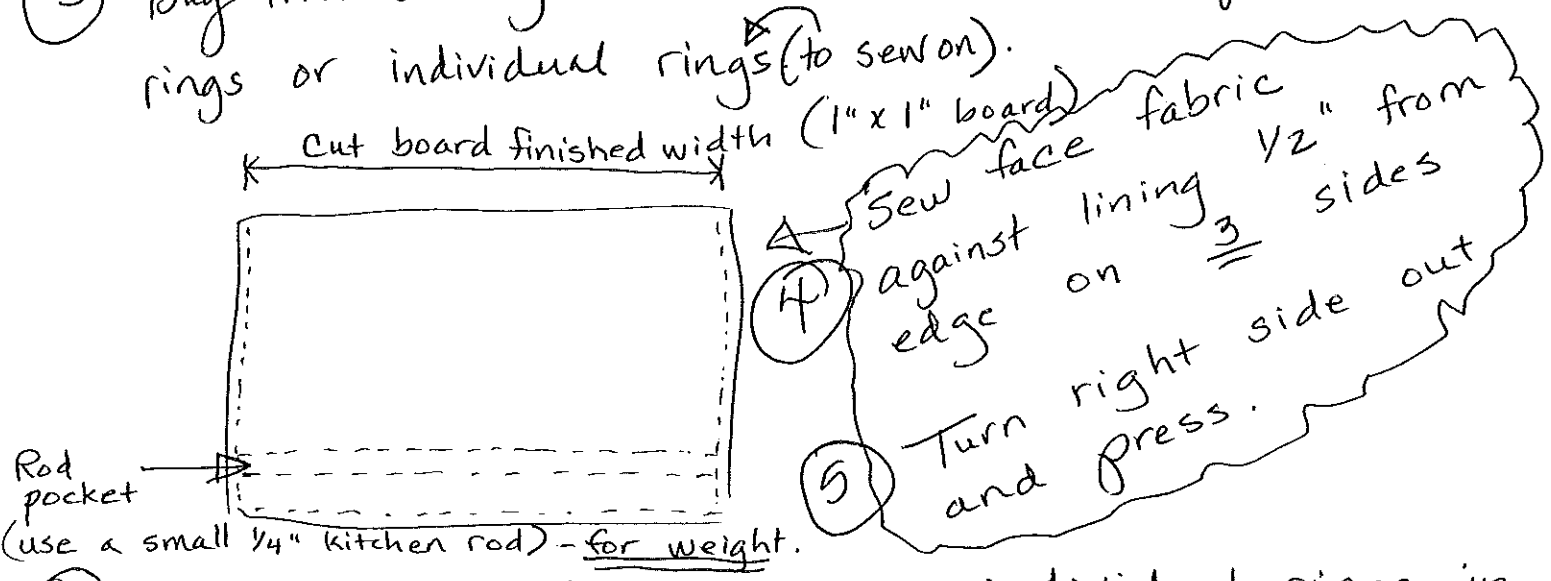

⑥ Place tape with rings or individual rings in 3 even rows:

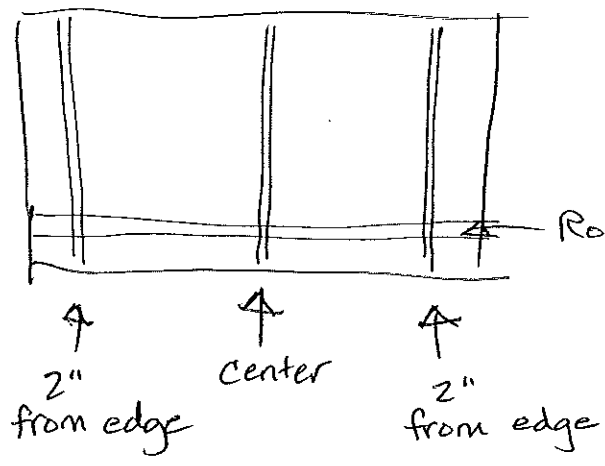

⑦ Rod pocket (open w/ a seam ripper) and slip in kitchen rod.

⑧ Fold unfinished top edge under and staple to 1" x 1" board. (Or if it needs to mold to van sides, a ¼" x 1" trim board will curve some.)

FRONT (showing where window is)

1/4" x 1" trim board cut to exact width of finished shade.

Making the shade 2" wider & 2" on top/bottom insures **PRIVACY!**


Insert 1/4" kitchen rod for weight.
 approx 2" (should hang below window 2")

1" Rod Pocket


BACK (showing how to draw w/ rings & cording)

These 3 Cords should be even!

staples

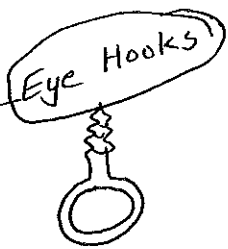

Screw into board
 Or if board is 1/4 x 1" flat, sew another Ring there, instead.

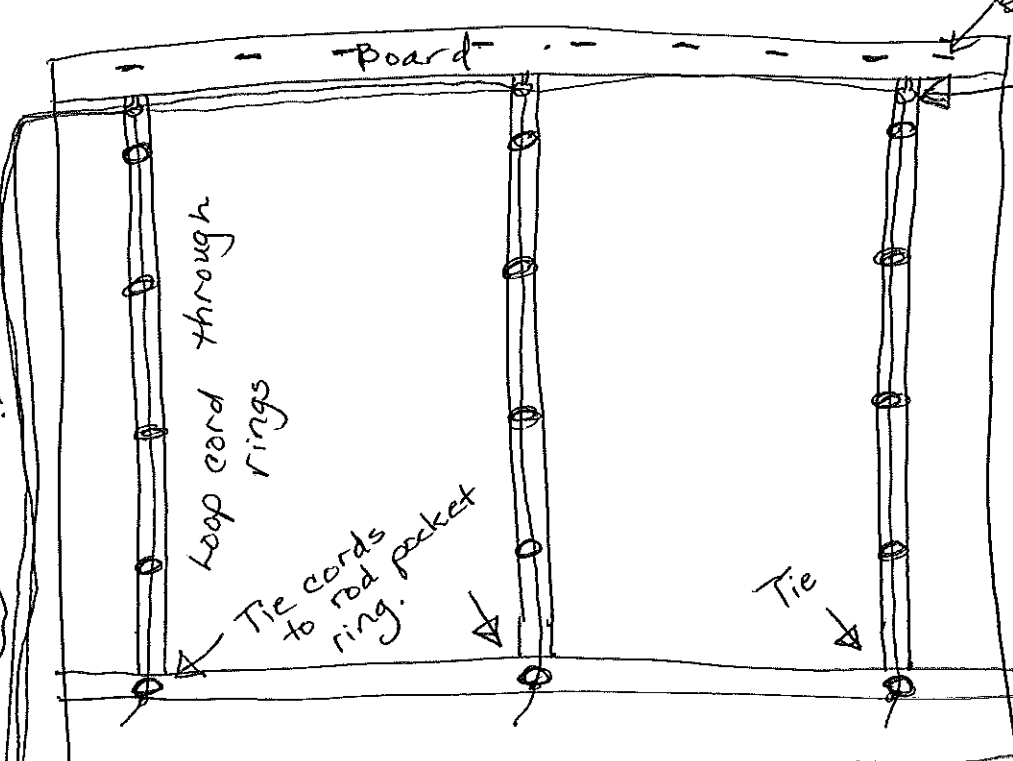

attach to wall behind blind
 Braid and Tie
 (And should be length of shade + 2")

This cord is shortest.
 Mid-length.
 This cord is longest.